ACCESSORIES

Contact Wheels and Assemblies (Cont'd)

Keep your Belt Tools Running at Maximum Efficiency

Dynafile® Contact Arm Assemblies (Cont'd) *Assembly comes standard with contact arm shown									
Contact Arm Part Number		Wheel Assembly Part Number		Wheel P/N	Wheel Dia.	Wheel Width	Wheel I.D.	Face Surface	Material
11243		11084*		11083	3/4"	1/2"	3/8"	Crowned	70 Duro Rubber
11244		11078*	0	11077	5/8"	3/8"	3/8"	Crowned	70 Duro Rubber
11245		11078*		11077	5/8"	3/8"	3/8"	Crowned	70 Duro Rubber
11050		-	(?)	11377	2-1/8"	1/2"	5/8"	Flat	Urethane
11253		-	0	11378	2-1/8"	1/4"	5/8"	Flat	Urethane
		-	0	11375	4-3/8"	1/2"	5/8"	Flat	Urethane
11254		-		11376	4-3/8"	1/4"	5/8"	Flat	Urethane
11255		11078*		11077	5/8"	3/8"	3/8"	Crowned	70 Duro Rubber
11258		11078*		11077	5/8"	3/8"	3/8"	Crowned	70 Duro Rubber
11261		11078*	0	11077	5/8"	3/8"	3/8"	Crowned	70 Duro Rubber
11262	0	11078*		11077	5/8"	3/8"	3/8"	Crowned	70 Duro Rubber
11297		11090*	<u>0</u>	11077	5/8"	3/8"	3/8"	Crowned	70 Duro Rubber
11312		11078*		11077	5/8"	3/8"	3/8"	Crowned	70 Duro Rubber

Dynafile® II Contact Arm Assemblies

*Assembly comes standard with contact arm shown

	Contact Arm Part Number		Wheel Assembly Part Number		Wheel P/N	Wheel Dia.	Wheel Width	Wheel I.D.	Face Surface	Material
	11200		11088*	0	11077	5/8"	3/8"	3/8"	Crowned	70 Duro Rubber
11201			11068*		11067	5/16"	3/8"	1/4"	Crowned	Steel
	11201		11070	0	11069	7/16"	3/8"	1/4"	Crowned	70 Duro Rubber
			11076		11075	7/16"	3/8"	3/8"	Crowned	Steel