Assembly Instructions - Throttle Body, Valve and Muffler - 7°Off-Set

- 1. Refer to the parts page or tool manual and follow the exploded view instructions to assemble the muffler and valve components.
- 2. Install the 01564 Air Control Ring onto the 01578 Inlet Adapter.
 - Apply a small amount of Loctite #567 to the male thread of the inlet adapter.
 - By hand, install the the **01578** Inlet Adapter onto the throttle body.

Visit Our Website: www.dynabrade.com

Email: customer.service@dynabrade.com

DYNABRADE, INC. • DYNABRADE INTERNATIONAL 8989 Sheridan Drive, Clarence, New York 14031-1490 USA

Telephone: (716) 631-0100 • Fax: 716-631-2073 • Int'l Fax: 716-631-2524

DYNABRADE DO BRASIL

Rua Oneda, 632, Sao Bernardo do Campo • SP – CEP 09895-280 Telephone: 55-11-4390-0133 • Fax: 55-11-4399-1067

DYNABRADE EUROPE S.à r.I.

Zone Artisanale, L-5485 Wormeldange—Haut, Luxembourg Telephone: +352 768 494 1 • Fax: +352 768 495

DYNABRADE INDIA ABRASIVE POWER TOOLS Pvt Ltd.

EL-54, TTC Industrial Area, M.I.D.C. Mahape, Electronic Zone, Navi Mumbai - 400705 Maharashtra, India • Telephone: +91 22 2763 2226 • Fax: +91 22 2763 2228



Disassembly/Assembly Instructions



3. Fasten the **01578** Inlet Adapter in the vise with aluminum or bronze jaws so that the throttle body is pointing up.

Use the **96393** Throttle Body Socket and torque wrench to tighten the inlet adapter onto the throttle body. Turn clockwise. (**T** to 28 N•m/~250 in. lbs.)



4. Apply a small amount of clean grease to the **95523** O-Ring and install it onto the throttle body.

Visit Our Website: www.dynabrade.com

Email: customer.service@dynabrade.com

DYNABRADE, INC. • DYNABRADE INTERNATIONAL

8989 Sheridan Drive, Clarence, New York 14031-1490 USA Telephone: (716) 631-0100 • Fax: 716-631-2073 • Int'l Fax: 716-631-2524

DYNABRADE DO BRASIL

Rua Oneda, 632, Sao Bernardo do Campo • SP – CEP 09895-280 Telephone: 55-11-4390-0133 • Fax: 55-11-4399-1067

DYNABRADE EUROPE S.à r.I.

Zone Artisanale, L-5485 Wormeldange—Haut, Luxembourg Telephone: +352 768 494 1 • Fax: +352 768 495

DYNABRADE INDIA ABRASIVE POWER TOOLS Pvt Ltd.

EL-54, TTC Industrial Area, M.I.D.C. Mahape, Electronic Zone, Navi Mumbai - 400705 Maharashtra, India • Telephone: +91 22 2763 2226 • Fax: +91 22 2763 2228



Disassembly/Assembly Instructions





- 5. Apply Loctite Primer #7649 to the threads of the 01546 Housing.
 - Apply a small amount of Loctite #567 to the housing.



- **6.** Install the throttle body onto the 7° housing.
 - Notice: Hold the throttle lever in the desired position. Use the 96460 and a torque wrench to fasten the throttle body onto the 7° hous ing. Left Hand Thread Turn counterclockwise. (T to 45 N•m/~400 in. Lbs.)
 - Pull the **01558** Collar back over the throttle body lock nut.

Throttle Body, Valve and Muffler Assembly Completed.

Visit Our Website: www.dynabrade.com

Email: customer.service@dynabrade.com

8989 Sheridan Drive, Clarence, New York 14031-1490 USA Telephone: (716) 631-0100 • Fax: 716-631-2073 • Int'l Fax: 716-631-2524

DYNABRADE DO BRASIL

Rua Oneda, 632, Sao Bernardo do Campo • SP – CEP 09895-280 Telephone: 55-11-4390-0133 • Fax: 55-11-4399-1067

DYNABRADE EUROPE S.à r.i.

Zone Artisanale, L-5485 Wormeldange—Haut, Luxembourg Telephone: +352 768 494 1 • Fax: +352 768 495

DYNABRADE INDIA ABRASIVE POWER TOOLS Pvt Ltd.

EL-54, TTC Industrial Area, M.I.D.C. Mahape, Electronic Zone, Navi Mumbai - 400705 Maharashtra, India • Telephone: +91 22 2763 2226 • Fax: +91 22 2763 2228