


Assembly Instructions - 0.4 hp. Air Motor (7° Offset)

(Models: 47211, 47212, 48205, 48207, 48335, 48337, 48500, 48503)


Motor Assembly:

1. Install the **01479** Spacer onto the rotor.
2. Select **.003"** (~0.08 mm) shim thickness from the **54529** Shim Pack. Install shims into the **01478** Front Bearing Plate.
3. Install the **02649** Bearing into the front bearing plate and onto the rotor.
Notice: For the planetary geared models use the **RAISED CENTER** of the **96240** Bearing Press Tool and the arbor press to install the **02649** Bearing along with bearing plate.

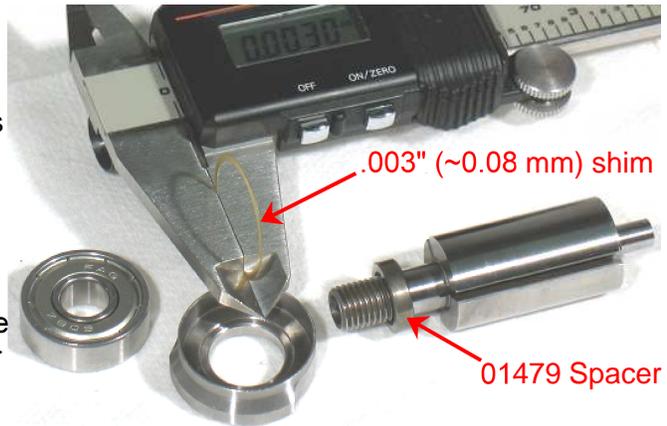

4. Fasten the rotor in the vise with aluminum or bronze jaws so that the spindle is pointing up. Use a 12 mm socket and torque wrench to install the **50133** Adapter or **01435** Collet Body. Turn clockwise. (T 17 N•m/~150 in. lbs.)
5. Pull the front bearing plate forward to take play out of the bearing. Use a **.001"** (~0.03 mm) thick feeler gauge to check the clearance between the bearing plate and rotor.

Notice: Clearance should be **.001"**-.0015" (~0.03-0.04 mm). Repeat steps 2-5 if the clearance needs further adjustment. Install or remove shims as required.

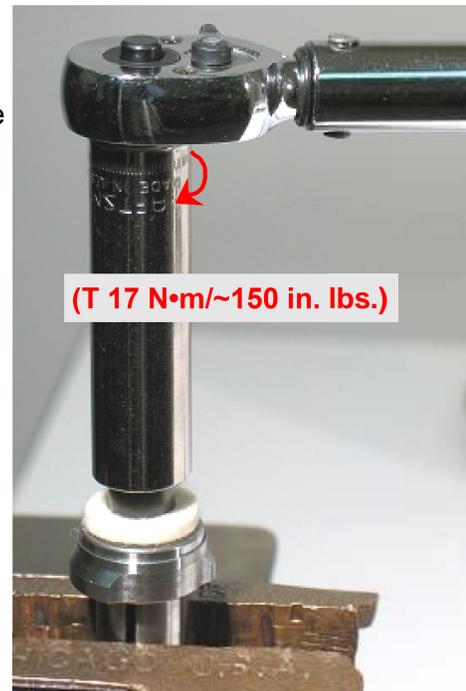

Visit Our Website: www.dynabrade.com

Email: customer.service@dynabrade.com


DYNABRADE, INC. • DYNABRADE INTERNATIONAL
8989 Sheridan Drive, Clarence, New York 14031-1490 USA
Telephone: (716) 631-0100 • Fax: 716-631-2073 • Int'l Fax: 716-631-2524

DYNABRADE EUROPE S.à.r.l.
Zone Artisanale, L-5485 Wormeldange—Haut, Luxembourg
Telephone: +352 768 494 1 • Fax: +352 768 495

DYNABRADE DO BRASIL
Rua Oneda, 632, Sao Bernardo do Campo • SP – CEP 09895-280
Telephone: 55-11-4390-0133 • Fax: 55-11-4399-1067

DYNABRADE INDIA ABRASIVE POWER TOOLS Pvt Ltd.
EL-54, TTC Industrial Area, M.I.D.C. Mahape, Electronic Zone, Navi Mumbai - 400705
Maharashtra, India • Telephone: +91 22 2763 2226 • Fax: +91 22 2763 2228

7. Use Dynabrade Air Lube **95842** 10W/NR (or equivalent) to lubricate the **01480** Vanes. Install the vanes in the rotor.
8. Install the **01476** Cylinder and the **02673** Rear Bearing Plate so that the air inlet openings line-up.

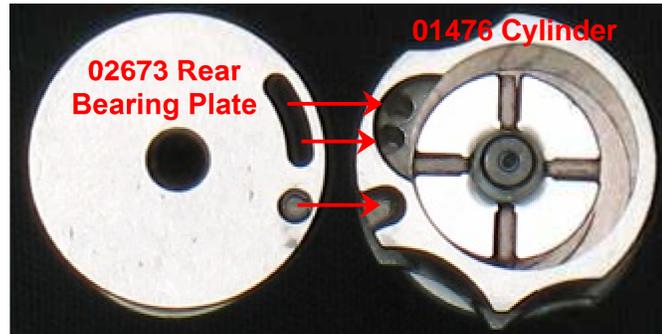

9. Position the **02696** Bearing onto the bearing journal of the rotor.




10. Use the **RAISED CENTER** of the **96242** Bearing Press Tool and the arbor press to install the **02696** Bearing onto the rotor, and into the **02673** Rear Bearing Plate.

IMPORTANT: Carefully press the bearing until the plate just touches the cylinder. Establish a "snug-fit" between the bearing plates and the cylinder.



11. If the model contains a **02679** Shield, place a small amount of clean grease on the seal of the **02696** Bearing and stick the shield against the bearing.
12. Install the motor into the **01546/50776** Housing. **Notice:** The **02673** Rear Bearing Plate has an air channel. It is not necessary to orient the air inlet of the motor with the air inlet on the inside of the housing.

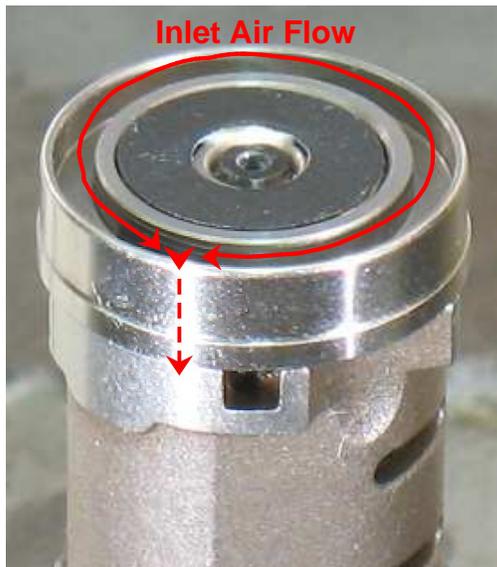

13. Apply a small amount of Loctite Primer # 7649 to the threads of the **01546/50776** Housing. Apply a small amount of Loctite #567 to the housing.

14. Use the **50971** Lock Ring Tool and a torque wrench to install the cover/lock nut. (T to 28 N•m/~250 in. Lbs.)



Motor Assembly Complete.

Visit Our Website: www.dynabrade.com

Email: customer.service@dynabrade.com

DYNABRADE, INC. • DYNABRADE INTERNATIONAL
8989 Sheridan Drive, Clarence, New York 14031-1490 USA
Telephone: (716) 631-0100 • Fax: 716-631-2073 • Int'l Fax: 716-631-2524

DYNABRADE DO BRASIL
Rua Oneda, 632, Sao Bernardo do Campo • SP – CEP 09895-280
Telephone: 55-11-4390-0133 • Fax: 55-11-4399-1067

DYNABRADE EUROPE S.à.r.l.
Zone Artisanale, L-5485 Wormeldange—Haut, Luxembourg
Telephone: +352 768 494 1 • Fax: +352 768 495

DYNABRADE INDIA ABRASIVE POWER TOOLS Pvt Ltd.
EL-54, TTC Industrial Area, M.I.D.C. Mahape, Electronic Zone, Navi Mumbai - 400705
Maharashtra, India • Telephone: +91 22 2763 2226 • Fax: +91 22 2763 2228